

HOW TO PROGRAM YOUR DRAFT SYSTEM



MAKE SURE DISPENSER IS ON, THEN PRESS THE PROGRAM BUTTON.



PRESS AND HOLD THE DESIRED POUR SIZE UNTIL BEER STARTS TO FLOW (APPROX. 3 SEC.) THEN LET GO.



REMOVE CUP, GLASS OR PITCHER AND PRESS THE POUR MODE BUTTON. (REPEAT STEPS 1-5 AS NEEDED FOR OTHER SIZES)




UF

PLACE CUP, GLASS OR PITCHER DOWN ON THE NOZZLE.



WHEN THE DESIRED AMOUNT IS REACHED, PRESS THE START/STOP BUTTON TO STOP FLOW OF BEER.

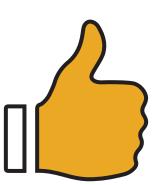

YOU'RE READY TO POUR HANDS-FREE!